



How do I handle my Klippo rotary mower when servicing it?

When you want to clean the underside of your machine, change blades or perform some other type of service, always handle the machine with the spark plug upwards, otherwise the oil in the engine will run out into the air filter or silencer and cause you problems. You should not have any petrol in the tank when you do this as it may leak.

NB

Always remove the terminal of the spark plug when working with your machine. If you have a machine with self-start, always let the spring unwind before working under the machine. Do this by removing the terminal from the spark plug. Try to start the engine and thus "empty" the spring. Then turn the orange key off.

